

BLDG 85—FIRE PROTECTION SYSTEM (FPS) EMERGENCY PROCEDURE

APPLICATION

Following automatic use of Building 85 high expansion foam (HEF) or aqueous film forming foam (AFFF) system.

SPECIAL INSTRUCTIONS

None.

WORK STEPS:

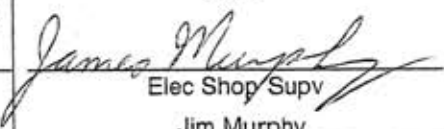
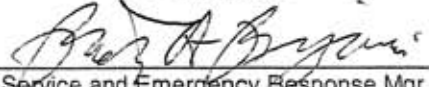
1. Thoroughly inspect FPS and other high expansion foam system equipment. Replace any damaged equipment.
2. Carry out FPS-12M yearly inspections and tests.
3. Thoroughly inspect DAMPER or VENT. Remove fugitive materials from blades, linkage and bearings.
4. Refill FOAM CONCENTRATE TANKS.

REFERENCES

1. COSCO O & M Manual.
2. NFPA 11A.

RESPONSIBILITIES AND CONTROLS

Completion of the following signature lines constitutes approval of this procedure:

REV NO.	SME	APPROVED BY	DATE	REVISION DATE
2	 Elec Shop Supv Jim Murphy (Print Name)	 Service and Emergency Response Mgr Bob Berninzoni (Print Name)	5-23-07	5/21/07
				EMRG-076